
# TARRES DE DISTRICTORES

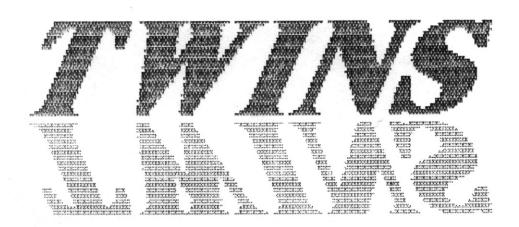

ECOGOMES 1993

# TWINS

## JAMMA WIRING

BOTTOM				TOP		
GND			1	GND		
GND			2	GND		
+5 VDC			3	+5 VDC		
+5 VDC			4	+5 VDC		
15 100			5			
+12 VDC			6	+12 VDC		
112 400			7			
			8			
			9			
SPEAKER	(-)		10	SPEAKER	(+)	
DI BIRCH	,		11			
GREEN			1.2	RED		
SYNCRO			13	BLUE		
BINORO			14			
			15			
COIN 2			16	COIN 1		
START	PLAYER	2	17	START	PLAYER	1
UP	PLAYER	2	18	UP	PLAYER	1
DOMN	PLAYER	2	19	DOWN	PLAYER	1
LEFT	PLAYER	2	20	LEFT	PLAYER	1
RIGHT	PLAYER	2	21	RIGHT	PLAYER	1
FIRE 1	PLAYER	2	22	FIRE 1	PLAYER	1
FIRE 2	PLAYER	2	23	FIRE 2	PLAYER	1
FIRE 2			24			
			25			
			26			
GND			27	GND		
GND			28	GND		


NOTE: Presionen el pulsador, ubicado en la placa, al mismo tiempo que inicie la máquina. (Interruptor de RED)

To go to the test mode please push the button, found in the PCB, at the same time you start up the video machine. (AC main switch)

## INPUTS TEST

JOYST	ICK TEST
 JOYSTICK 1	JOYSTICK 2
UP DOWN LEFT RIGHT FIRE 1 FIRE 2 PLAYER 1	UP DOWN LEFT RIGHT FIRE 1 FIRE 2 PLAYER 2
COIN 1	COIN 2
	HELP PLAYER 2 NEXT TEST

## SCREEN TEST

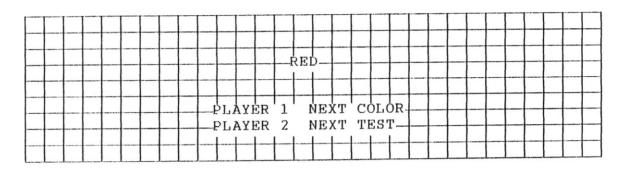

\*\* RED, GREEN, BLUE

## COLOR TEST


, RED

PLAYER 1 NEXT COLOR

PLAYER 2 NEXT TEST

\*\* RED, GREEN, BLUE

## PALETTE TEST

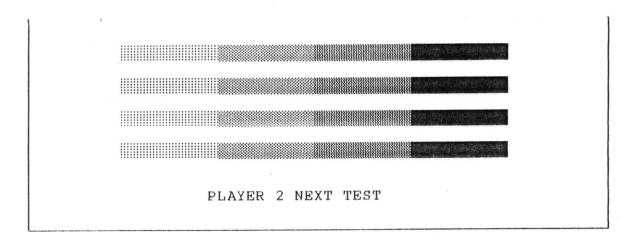

#### SOUND TEST

		MUSI	C AND	SOUND	TEST
			мисто	: 00	
				00	
				TF,	
FIRE PLAYER	1	PLAY	MUSIC	:	
FIRE PLAYER	2	PLAY	SOUND	)	
PLAYER 2		NEXT	TEST		

\*\* MUSIC 0..4

\*\* SOUND 0..25

#### SWITCH CONFIGURATION

#### CONFIGURATION 2 COIN 1 CREDIT (default) COIN 1 MODE 1 COIN 2 CREDIT (default) COIN 2 MODE DIFFICULTY NORMAL YES MUSIC NO DEMO MUSIC FACTORY DEFAULTS \_HELP\_ PLAYER 1 CHANGE NEXT OPTION DOMN UP PREVIOUS OPTION PLAYER 2 NEXT TEST

- \*\* DIFFICULTY (EASY, NORMAL (default), HARD)
- \*\* COIN 1 MODE 1 COIN 1 CREDIT, 1 COIN 2 CREDITS
  1 COIN 3 CREDITS, 1 COIN 4 CREDITS
  1 COIN 6 CREDITS, 2 COIN 1 CREDIT
  3 COINS 1 CREDIT, 4 COINS 1 CREDIT
- \*\* COIN 2 MODE 1 COIN 1 CREDIT, 1 COIN 2 CREDITS
  1 COIN 3 CREDITS, 1 COIN 4 CREDITS
  1 COIN 6 CREDITS, 2 COIN 1 CREDIT
  3 COINS 1 CREDIT, 4 COINS 1 CREDIT
- \*\* MUSIC (ON(default), OFF)
- \*\* DEMO MUSIC (ON, OFF(default))